 
 
 
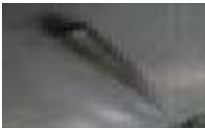 
 
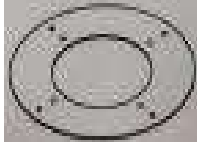 


Carnival Park Parts List

 
NO.	Part Number	Part Description	Picture
1	CP-001	Chasis	
2	CP-003	Carbon Brush Base	
3	CP-005	Insulator A	
4	CP-007	Insulator B	
5	CP-009	Insulator C	
6	CP-011	Rotating Frame	
7	CP-013	Drive Sprocket	
8	CP-015	Driven Shaft	
9	CP-017	Rotating Wheel	
10	CP-019	Crankshaft	

 
 
11	CP-021	Drive shaft	
12	CP-023	Bracket for relay	
13	CP-025	Internal Part for Fiberglass Horse	
14	CP-027	Drive Wheelbase Assembly A	
15	CP-029	Driven Wheelbase Assembly B	
16	CP-031	Drive Wheel Shaft A	
17	CP-033	Driven Wheel Shaft B	
18	CP-035	Holder for Plane Bearing	
19	CP-037	Stainless Steel Screw Rod	
20	CP-039	Sleeve for Screw Rod	
21	CP-041	Pad for Screw Rod	
22	CP-043	Main Pole	

23	CP-045	Marquee Connecting Frame	
24	CP-047	Coin Door Assembly	
25	CP-049	Door for Coin Selector	
26	CP-051	Coin Box	
27	CP-053	Service Door Assembly	
28	CP-055	Service Door	
29	CP-057	Embedded part for fiberglass	
30	CP-059	Speaker Holder	
31	CP-061	Button Holder	
32	CP-063	Power Supply Bracket	
33	CP-065	Speaker Cover	
34	CP-100	Fiberglass Horse	

 
 
35	CP-102	Fiberglass Pedal - Blue	
36	CP-104	Fiberglass Base	
37	CP-106	Fiberglass Pole	
38	CP-108	Fiberglass Marquee	
39	CP-110	Fiberglass Horse Base	
40	CP-112	Wires Set	
41	CP-114	lock	
42	CP-116	lock	
43	CP-118	Ring for LED	
44	CP-120	Base for LED	
45	CP-122	Guide Rail	
46	CP-124	Boot	

47	CP-126	Gem - Pink	
48	CP-128	Gem - Green	
49	CP-130	Gem Holder A	
50	CP-132	Gem Holder B	
51	CP-134	Handle - Orange	
52	CP-136	Motor	
53	CP-138	Inverter	
54	CP-140	Leg Leveler	
55	CP-142	Caster	
56	CP-144	Rotating Wheel	
57	CP-146	Plane Bearing	
58	CP-148	Bearing - 6004	

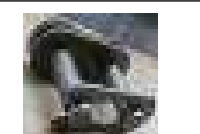59	CP-150	Mounted Bearing	
60	CP-152	Mounted Bearing	
61	CP-154	Mounted Bearing	
62	CP-156	Chain	
63	CP-158	Chain Lock	
64	CP-160	Conducting Ring	
65	CP-162	Upper Insulated Ring	
66	CP-164	Lower Insulated Ring	
67	CP-166	Carbon Brush Holder	
68	CP-168	Carbon Brush bracket	
69	CP-170	Nut - M24	
70	CP-172	Square Key	

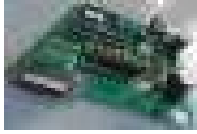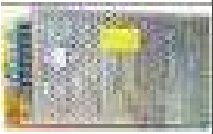71	CP-174	Pressure Spring	
72	CP-176	C Outer circlip	
73	CP-178	Outer circlip	
74	CP-180	Speaker LED Board	
75	CP-182	Power Board	
76	CP-184	Main I/O Board	
77	CP-186	SW Setting Board	
78	CP-188	Light Board (white)	
79	CP-190	LED light board	
80	CP-192	Nylon Connector	
81	CP-194	Power Supply - 150 Watt 12V	
82	CP-196	Chasing Light Controller PCB	

83	CP-198	Fan	
84	CP-200	Wire Mesh	
85	CP-202	Button w/ Light	
85.5	CP-203	Button Assembly	
86	CP-204	Micro Switch	
87	CP-206	LED Indicator	
88	CP-208	Air Switch	
89	CP-210	Speaker	
90	CP-212	Coin Selector	
91	CP-214	Meter	
92	CP-216	Button Switch	
93	CP-218	LED Light A	

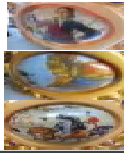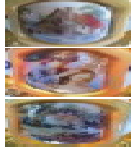94	CP-220	LED Light B	
95	CP-222	LED Wire Connector	
96	CP-224	Light Strip	
97	CP-226	IC	
98	CP-228	IC	
99	CP-230		
100	CP-232		
101	CP-234	Decoration Cover - Oval	
102	CP-236	Decoration Cover - Rectangle	
103	CP-238	Plastic Strip	
104	CP-240	Decoration Cover - Curved	
105	CP-242	Plastic Cover	

106	CP-244	Holder for Boot	
107	CP-246	Speaker Cover - Clear	