

Software version: V1.0.0

OS version : V5.05P

Model No.: KA-830

CRUISIN'57

USER MANUAL




CONTENTS

1. General Information -----	3
1.1 Specifications-----	3
1.2 Warnings-----	4
1.3 Caution-----	4
1.4 Use -----	4
1.5 Maintenance -----	4
2. Shipping list -----	5
3. Machine installation instructions-----	6
4. Parts and Functions -----	8
4.1 How to Move/Lock The Machine-----	9
5. Game Instruction-----	10
6. Background Setting Instruction-----	12
6.1 How To Enter The Background-----	12
6.2 Background Setting-----	12
6.3 Line module-----	13
7. Wiring Diagram -----	15
8. Quick Trouble Shooting-----	16
9. Error Code-----	18
10. Warranty-----	19

1. Specifications

Model	CRUISIN'57
Reference Code	KA-830
Standby Power	55W
Working Power	420W
Dimensions	78 x 43 x 48 Inch or 2000x1090x1210 mm
Weight	298 Lbs. or 136KGS
Rated Voltage	110VAC or 220 VAC
Seats	2
Users Range of Ages	3 years+

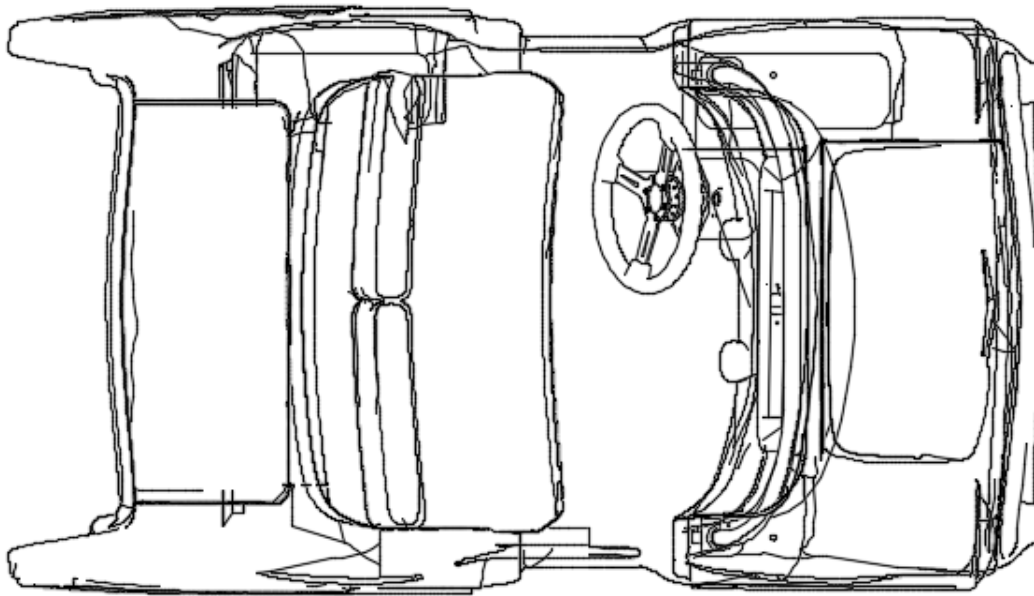

1.2 Warnings

- Do not place the machine anywhere without extra space around the parameter, ride does move.
- Put the machine in a flat and stable surface.
- Do not bend the power cord by force or place heavy objects on it.
- Before inspecting / working on the machine, make sure the power is OFF and game is unplugged from the wall
- Always use replacement parts and pieces authorized by JET Games for maintenance.

1.3 Cautions

- Do not put the power cord where it can be damaged or tripped on
- Use only with a grounded outlet.
- Confirm the rides specific power requirements before plugging in (110 or 220VAC)
- Do not lift the Car by the body, Must be always lifted by the base.

1.4 Use


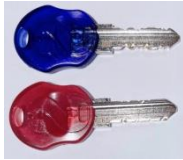

- Please make sure child sits well before insert coin.
- Players should not jump or get on /off while machine is in motion.
- Only one player on one seat.
- Do not lean on the machine when in use.
- This machine must be operated under adult's supervision.
- Please cut the power to the ride in emergency.

1.5 Maintenance

- Be sure to check and maintain the machine regularly.
- Switch off the power before cleaning or replacing the parts of the game machine.
- Only qualified personnel can inspect or test the electronic components.
- Please use clean and soft cloth to clean the machine.
- Use mild detergent to clean the surface of the machine.

2. Shipping List


Please make sure that you have received the items list as below:

No.	Description	Specification	Picture	Quantity	Remark
1	Manual			1	
2	Keys			2	Blue key for monitor cabinet and coin acceptor, red key for coin box
3	Power cord			1	

3. WINDSHIELD INSTALLATION



1) UNWRAP THE WINDSHIELD ASSEMBLY

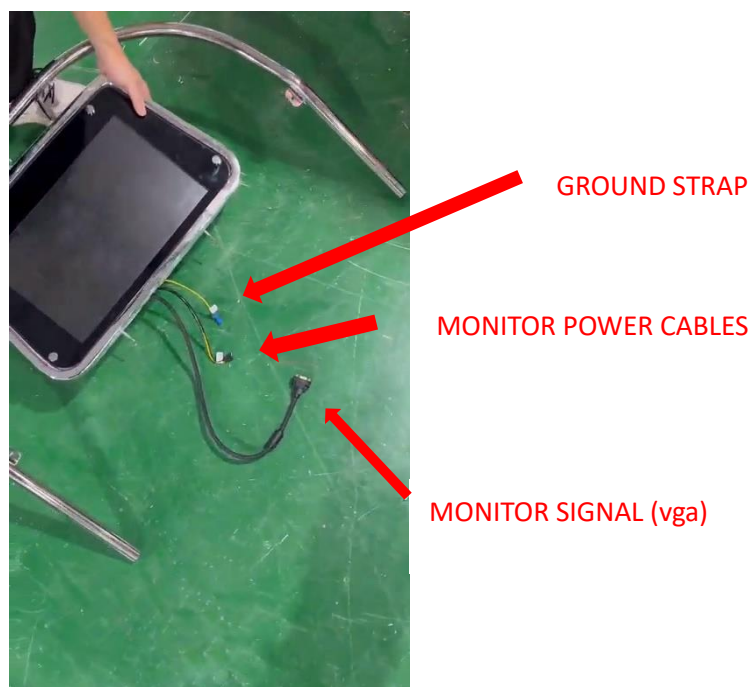

2) LOCATE THE MOUNTING HOLE ON THE BODY OF THE CAR FOR THE WINDSHIELD




Please note that when installing the windshield into the body of the car there are two rubber spacers that need to be used. Also do not tighten down the set screws for the windshield assembly unit the wire connections for the monitor are made.

Once the electrical connections are made you can lower the assembly in place and tighten the set screws with a 4M hex key.



4.Parts and Functions

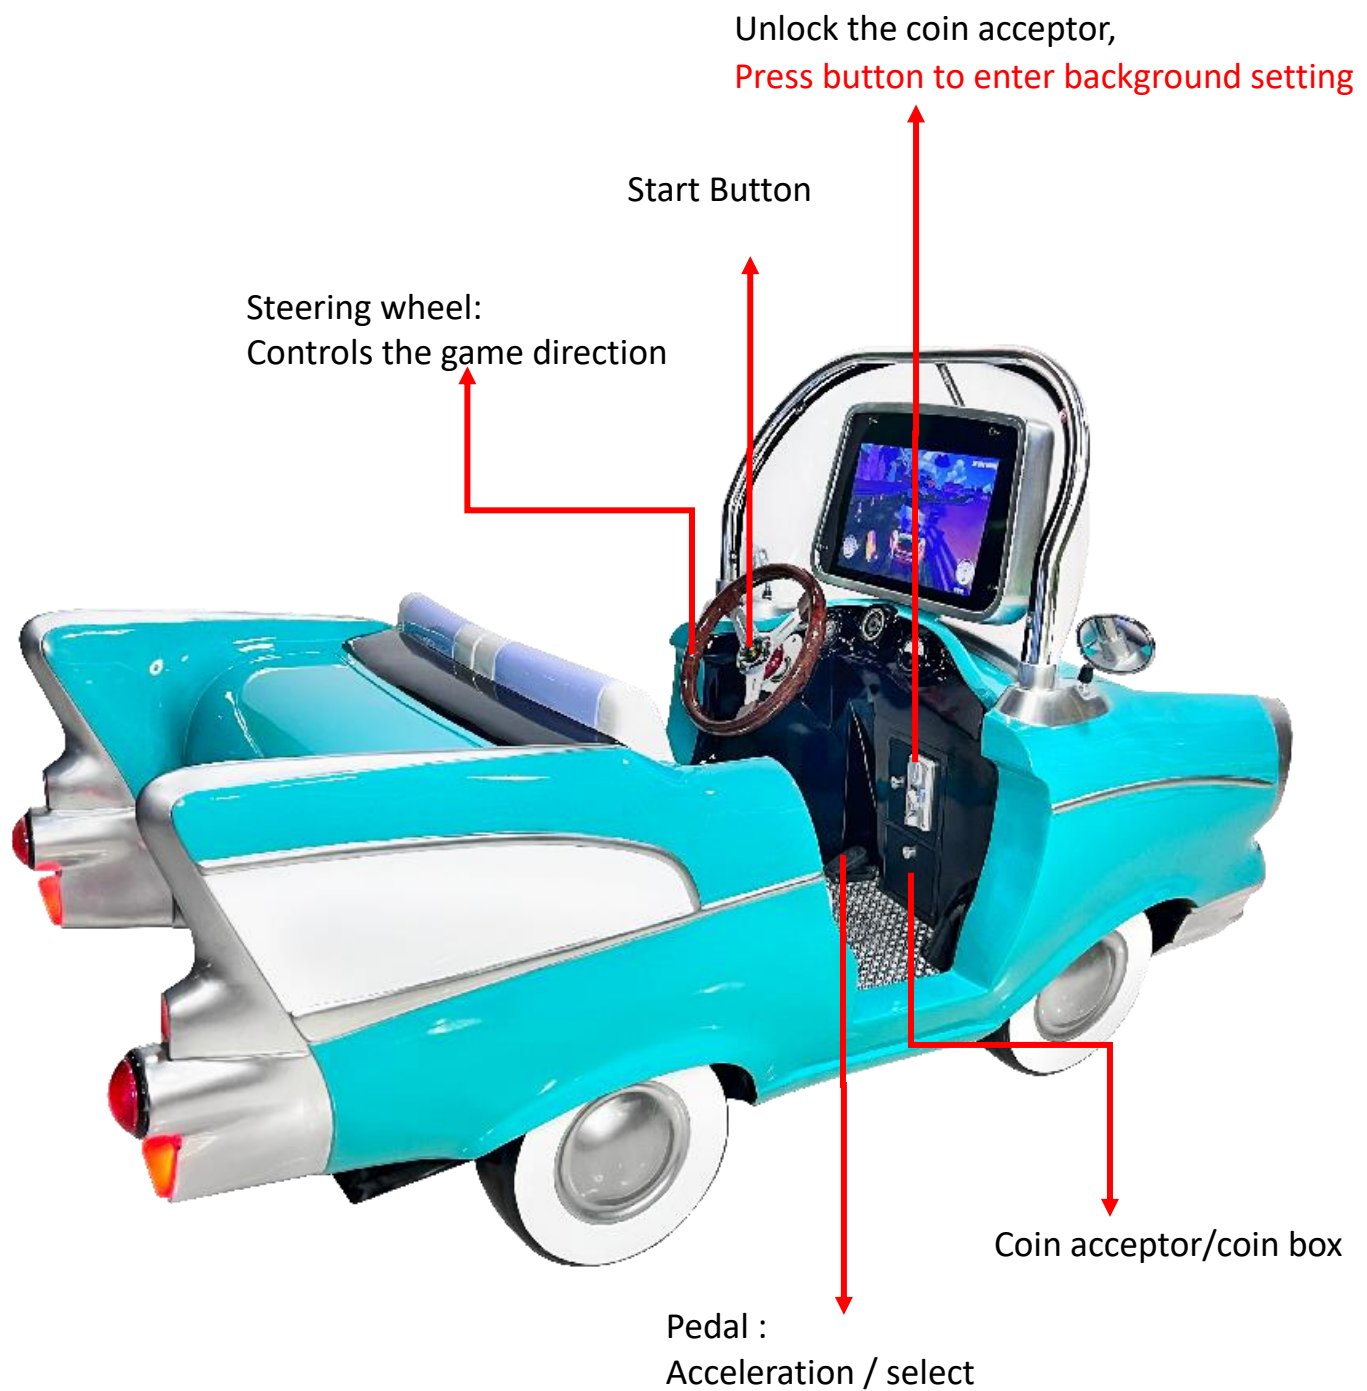

4.1 How to move/lock the machine


The machine must be placed on a horizontal surface. It comes with 4 adjustable feet and 4 casters.

When moving the machine: Adjust the pads to the highest point and keep at least 1cm away from the floor


Then lock adjusters in place on the machine: please keep all the pads horizontally fixed on the floor.

Operation as follows

- ① When moving the machine, adjust the foot pads to the highest point and keep the casters touch the floor.
- ② The machine can be easily moved while the wheels are load-bearing.

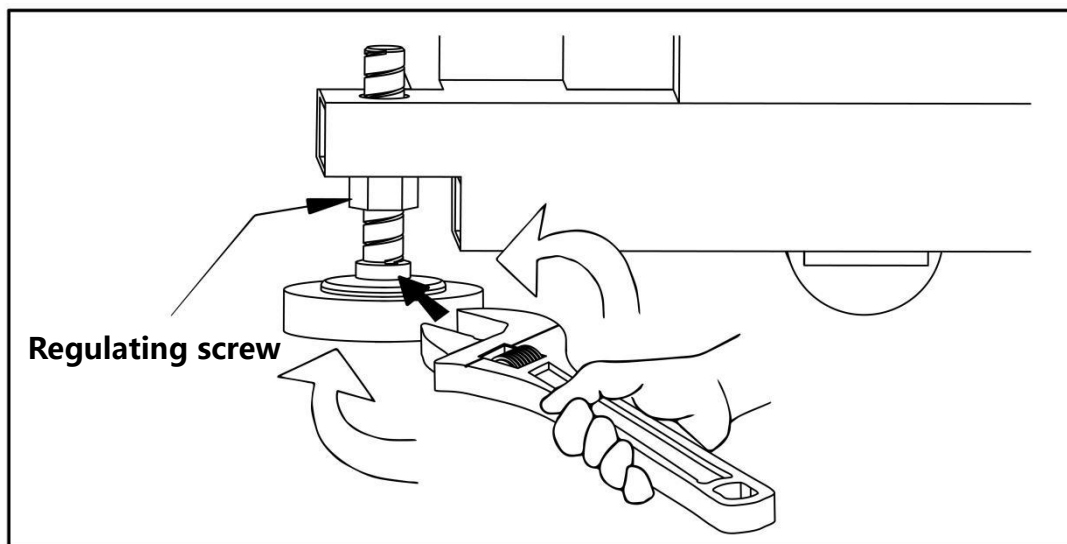

- ③ After confirm the location, tighten screws downward and fix it. Adjust the height of the four foot pads until the machine is in level.

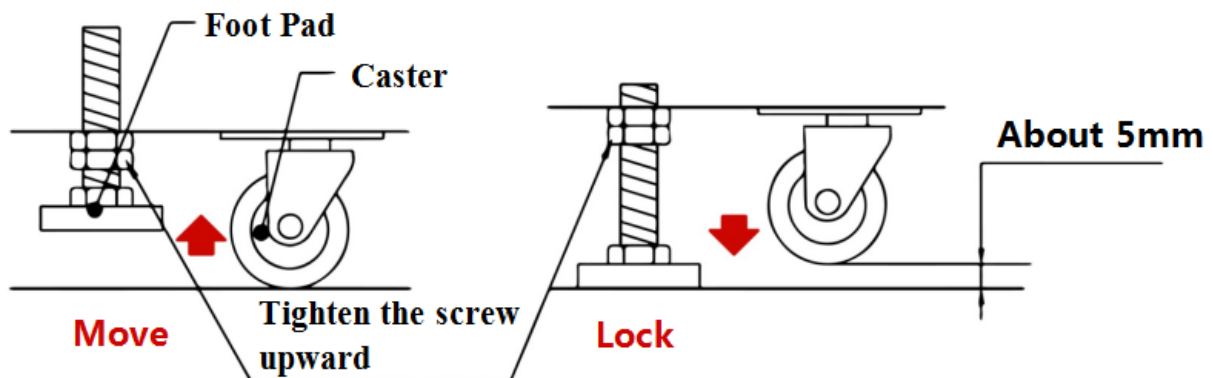




5.Game Instruction

Cruzin 57 is a dynamic swing machine with 3D interactive game. The game simulates real driving experience, Vibration up and down.

Players drive along the highways in LA, Las Vegas, Route 66 and Florida.

How to play

Device	Picture	Function
Steering wheel		Control direction
S key		Jumping or honking
Pedal		Acceleration




Game interface



Game Scene





Prop Introductions

Prop	Picture	Effect
Gold silver coins		Gain Points
Food		Accelerate
Oilcan		Increase play time

6. Background Setting

6.1 How to enter the background


Background key position	picture	How to operate
 Unlock coin acceptor		Press middle key for 2 seconds to enter software menu. Press left or right key to choose, middle key to confirm.


6.2 Background Setting

Select	Details	Description
Coins	1-9 coins	Coin QTY for playing
History account	1-9 mins	The number of coins inserted since the last clear. Restore factory Settings to clear zero.
General account		All coin slot accounts, cannot be cleared unless cleaning software provided by the original manufacturer is used
Sensor correction		Use the new steering wheel or direction Angle problems need to be corrected
Game reset		Restore factory setting, clean credits, clean

		outstanding tickets.
Test		Test different functions
Vibrate setting	5-9 level	Vibration intensity of the machine during the game
Save and quit		Please save the setting record before quit


6.3 Line module

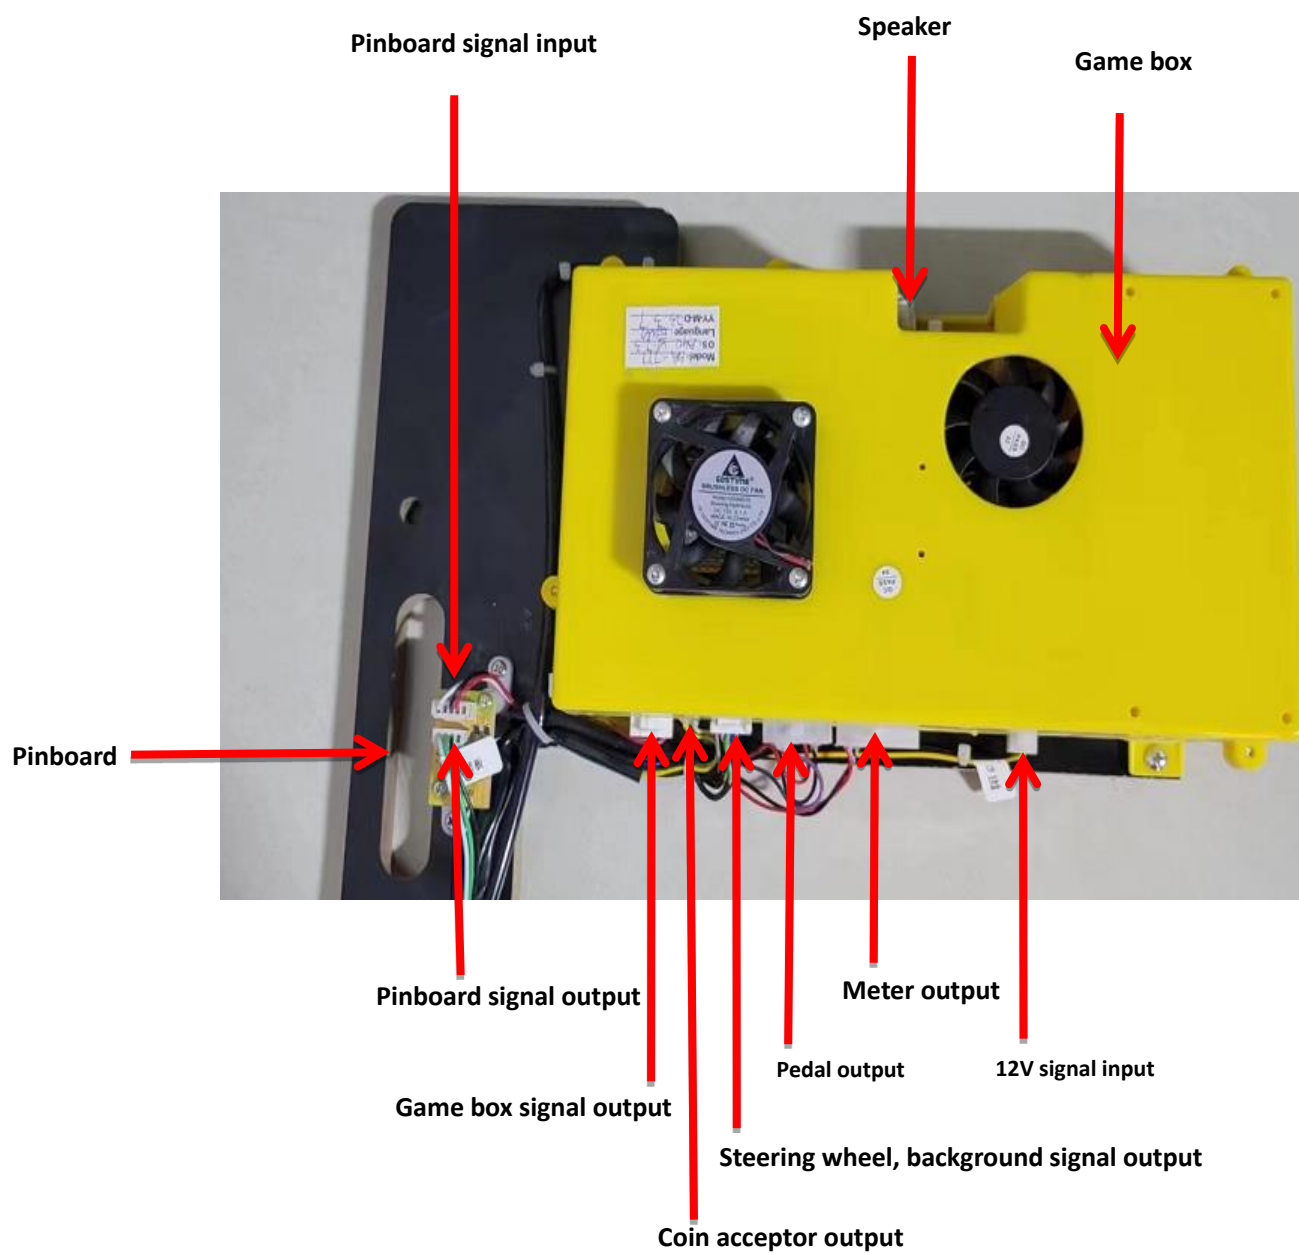

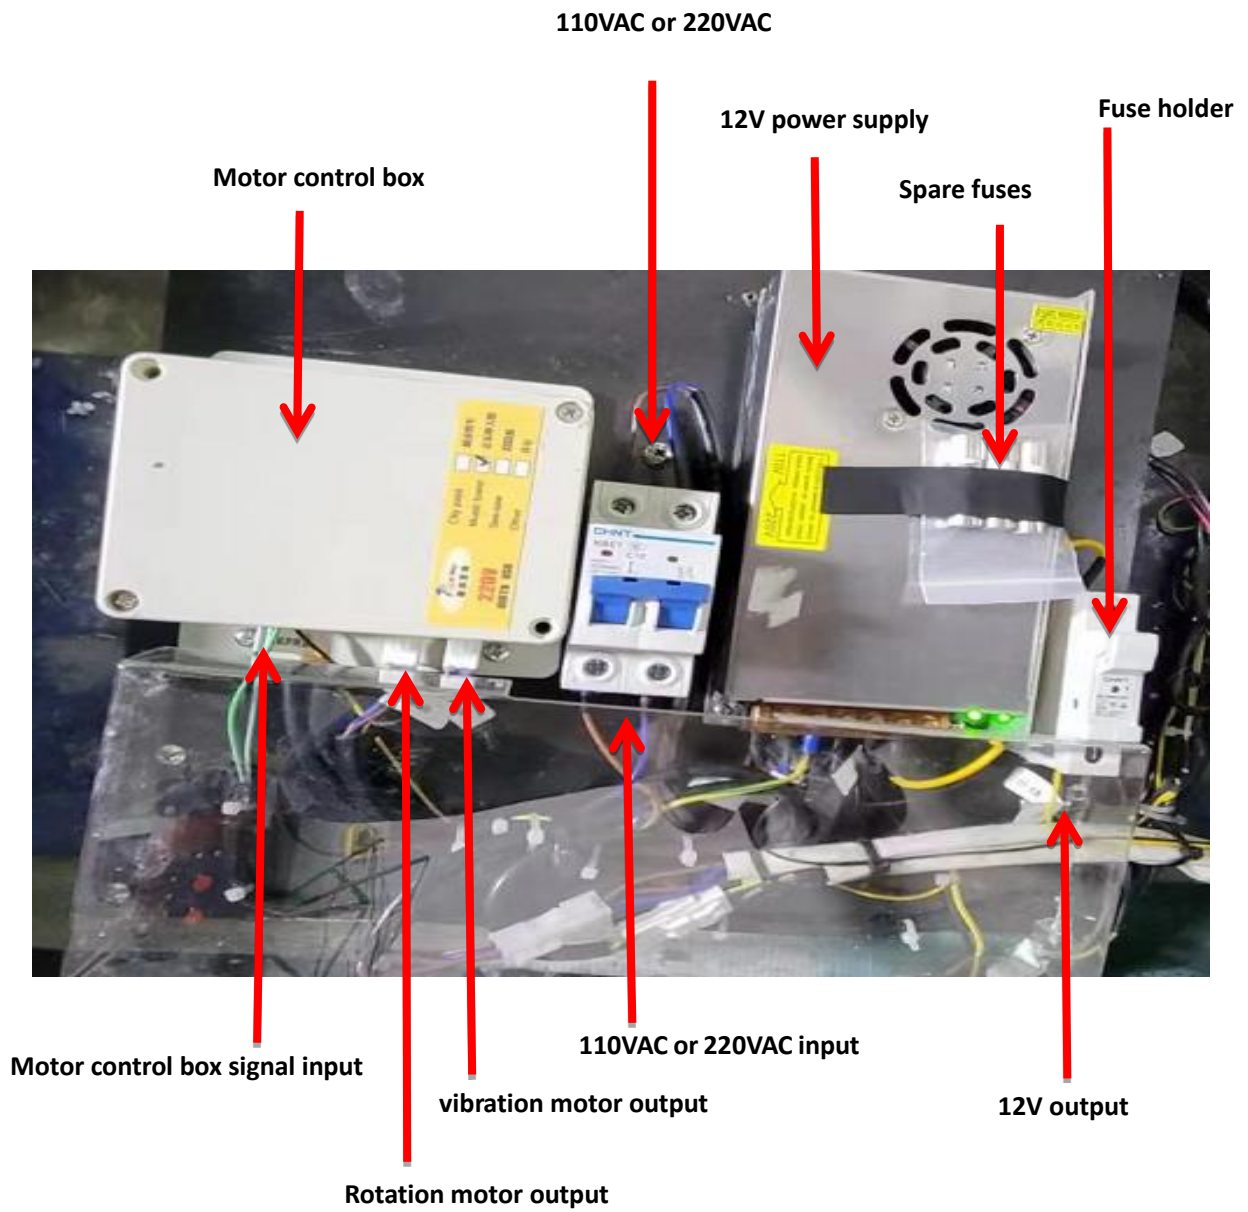

7.Wiring Diagram


“Game box” (Computer & I/O Board)

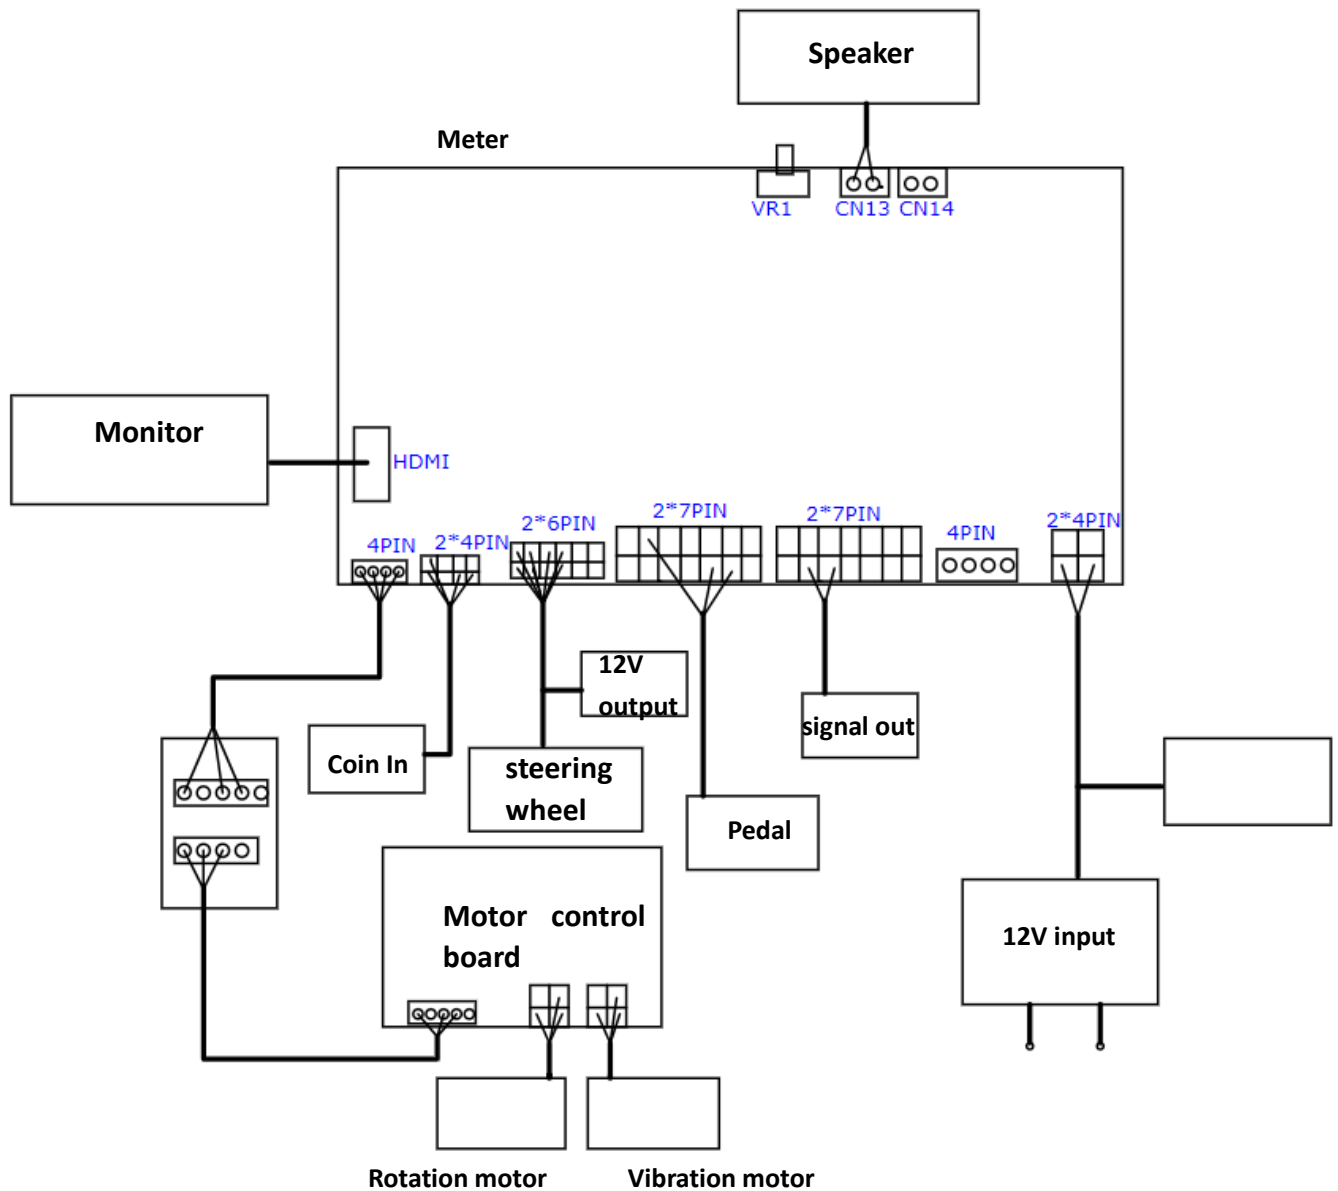

8.Quick Trouble Shooting

Ride will not boot, no electricity

Please check if 110VAC or 220VAC power cable is connected well. (Cable as picture 1)

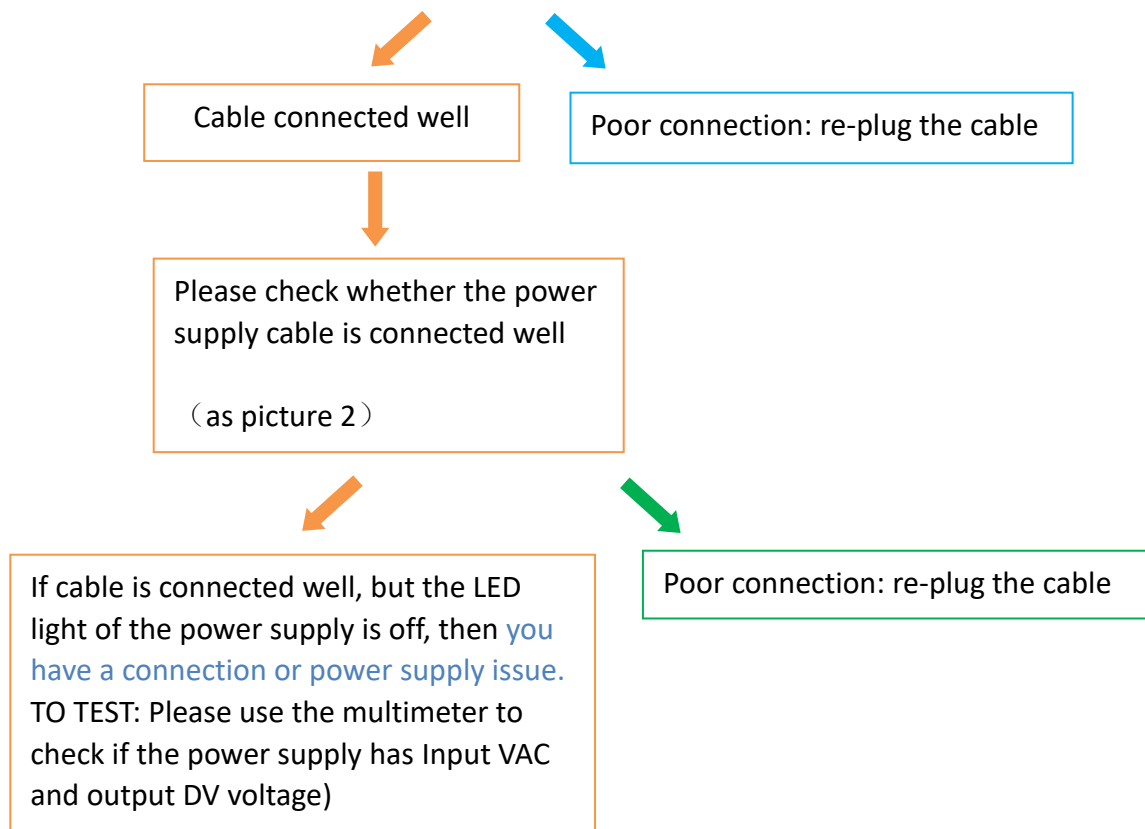


Picture 1



Picture 2

Power on machine, LED light is working, but monitor has no display.

Please check if the game box cable is connected well. (as picture 3)

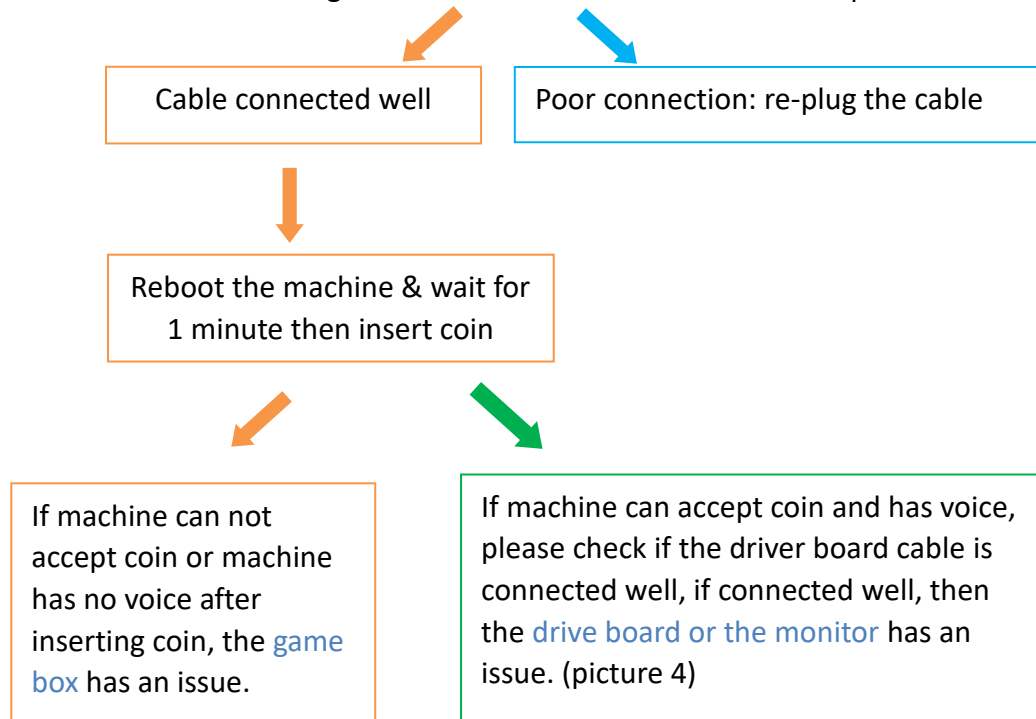

Picture 4



Picture 3

Machine has no voice during playing

Please check if the speaker cable is connected well. (picture 5)

Cable connected well

Poor connection: re-plug the cable

Turn up the volume to check if there is any sound, if no sound, it might be the problem caused by speaker or game box. (Test way: Please replace a good speaker, if machine has voice, then the **speaker is broken**. Or it's the game box's problem)



Picture 5

Coin acceptor can't accept the coin or accept coin but machine doesn't work

Please check if the coin acceptor cable is connected well.

Cable connected well

Poor connect: re-plug the cable

Please replace another coin acceptor, if coin acceptor is working, then it is the **game box's** problem.

9.Error Code

N/A

10.Warranty

JET Games Corp has a 12 month warranty on all electrical and mechanical parts for Cruzin 57.

Spare parts	Warranty
Game box	1 year
Motor	1 year
Motor control box	1 year
Power supply	1 year
lamp panel	1 year
Driver board	1 year
Steering wheel	1 year
LCD Screen	1 year
Pedal	1 year
Coin selector	1 year

***Warranty guarantee does not include physical damage or damage to parts modified by the customer.**



Cruisin 57 Miami Edition brings the spirit of Miami and the adventure of Route 66 together for kids! This immersive ride takes young drivers on a colorful journey from the neon-lit streets of South Beach to the iconic stops along Route 66. With vibrant retro tunes, surprise bonuses, and exciting obstacles, each ride captures the thrill of a classic American road trip, blending Miami's palm-lined beaches & art deco style with the open-road freedom of Route 66. Tailored for toddlers & children, this "JET Games RIDE!" delivers a unique, coast-to-coast adventure they won't forget!



JET GAMES CORPORATION - 822 SOUTH NOVA ROAD, DAYTONA BEACH, FLORIDA 32114
1-855-JET-GAME - WWW.JETGAMESUSA.COM