

# *Football Frenzy*

## MANUAL



### **Warning**

- \* Please read the manual before installation and use.
- \* Please put the manual together with the machine.



### **Jet Games USA**

**ADD: 822 S. Nova Rd. Daytona Beach, FL 32114**

**TEL: 1-855-JET-GAME**

**E-Mail: [INFO@JETGAMESUSA.COM](mailto:INFO@JETGAMESUSA.COM)**

**Web: [WWW.JETGAMESUSA.COM](http://WWW.JETGAMESUSA.COM)**

# CONTENTS

<b>I Specifications and Technical Parameters .....</b>	<b>1</b>
<b>II. Spare part List.....</b>	<b>2</b>
<b>III. How to Handle and Position the Machine .....</b>	<b>2</b>
<b>(I) Handling Method.....</b>	<b>3</b>
<b>(II) Fixing Method.....</b>	<b>3</b>
<b>(III) Product Placement .....</b>	<b>3</b>
<b>IV. Wiring and Precautions.....</b>	<b>4</b>
<b>V. Description of the Game.....</b>	<b>5</b>
<b>(I) Game Introduction .....</b>	<b>5</b>
<b>VI. Game Background Settings.....</b>	<b>5-7</b>
<b>VII. Installation and maintenance .....</b>	<b>8</b>

## Machine Introduction and Features:

1. 86" Ultra HD Immersive Display
2. 4 Dynamic Game Modes + Skill Challenges
3. Massive Bonus Jackpots
4. Revenue-Boosting Design

### I. Specifications and Technical Parameters



- 1) Operating voltage: AC 110V /220V - 240V 50/60 Hz
- 2) Maximum power: Min power consumption: 600 W  
Max power consumption: 400W
- 3) Overall dimensions: W3460\*L2060\*H3075(mm)
- 4) Weight: 350KGS
- 5) Ambient condition: Temperature (indoors): 0°C~35°C;
- 6) Humidity: ≤90%;
- 7) Atmospheric pressure: 86Pa~106Pa.


**Warning: After shutdown, please wait 1 minute before turning it on.**

**Note: The above technical parameters are subject to adjustment without prior notice.**

## II. Spare part list

For the normal use of the machine, please check whether the following items are included carefully after you open the package.

1. The spare part list is below:



S/N	Name	No./Specification	Quantity	Picture	Remarks
1	Power Cord	(10A/250V)	1		Standard
2	Key		2		Standard
3	Manual	English	1		Standard
4	Football		3		Standard

**Please open the package and check whether all accessories are included. If not, please contact the distributor of the machine for check.**

## III. How to Handle and Position the Machine


### (I) Handling Method

The machine is equipped with caster under the base plate. When moving the machine for a short distance, you should raise foot to make the casters touch the ground and push the machine.

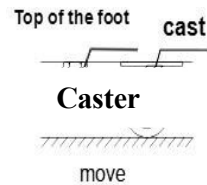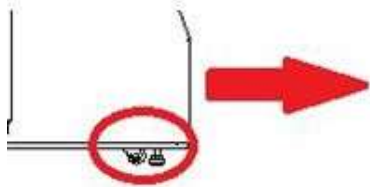

## (II) Fixing Method

Please place it on flat ground where it won't slide easily, loosen the locked nuts of the foot, tighten the anchor bolts with a wrench, and keep the caster approximately 5mm away from the ground.

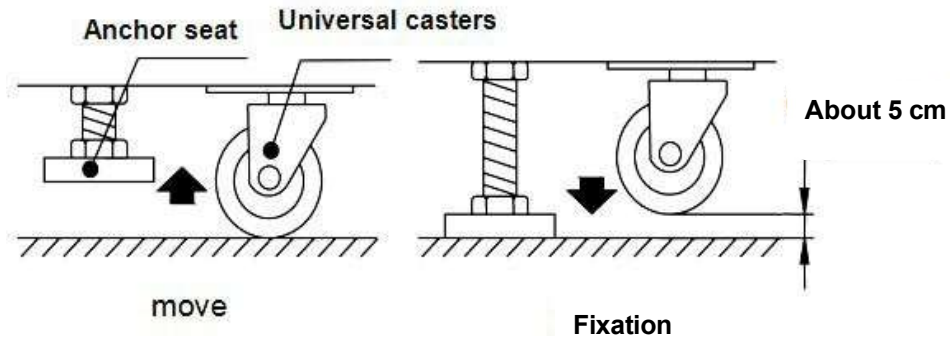

## (III) Product Placement

Do not place the product in the following places:

- Do not place the machine in a humid place with high humidity;
- Do not place the machine near a hot object;
- Do not place the machine next to flammable items;
- Do not place the machine on a smooth or uneven ground surface;
- Do not place the machine near high-frequency vibration objects;
- Do not place the machine in the dusty areas.



### Caution


Please unplug the power plug before moving to prevent accidents and faults.

Please take care not to damage the power cord during moving to prevent accidents and faults.

Please raise the foot to the maximum height before moving to prevent accidents and faults.


## IV. Wiring and Precautions

- Connect one end of the cable to the terminal box of the machine, and connect the other end to the socket.
- Connect the power supply according to the voltage (110V or 220V) on the label, or the machine might be damaged.
- Please confirm whether there is grounding in the socket to avoid unnecessary damage.
- If the grounding cannot be done through the socket, please try other methods.

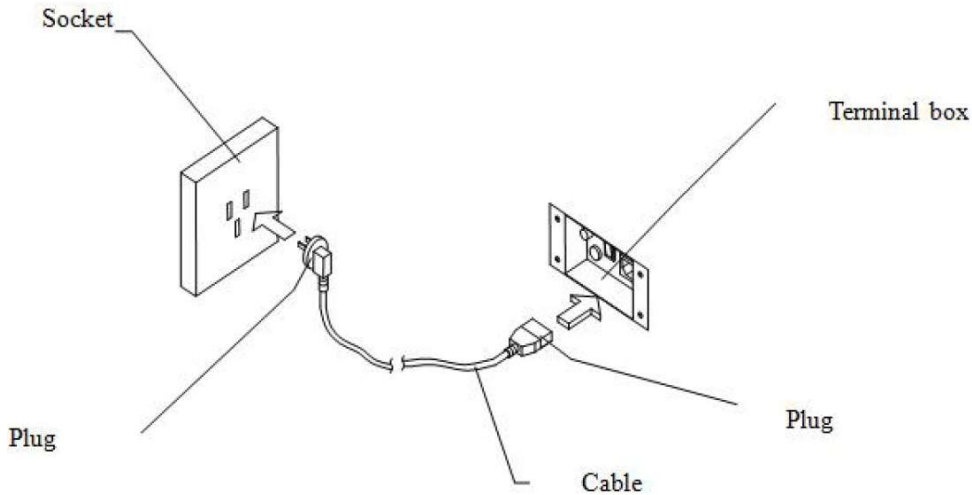

### Attention:

The cable cannot be pressed by heavy objects, or it might be easily damaged and cause short circuit, and even fire disaster.

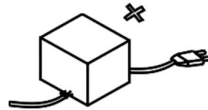


When unplugging the cable, you should grasp the plug instead of the cable.



It is not allowed to directly unplug with wet hands.



It is not allowed to directly unplug with wet hands.

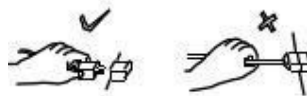

It is not allowed to forcibly stretch, twist or expose the cable, or put it close to high-temperature objects.  
It is not allowed to put the cable at places where it may be easily kicked or touched.



**Use correct voltage and fuse (refer to technical parameters).**

## V. Description of the Game

 
- ☆ Insert coin, select the themes and press start button or kick the football to start the game.
- ☆ Hit the targets with the football and get score.
- ☆ When reaching the target score will win the ticket corresponding to the score.



## VI. Game Background Settings



<b>Main Menu</b>
Param Setting
Level Set
Record
IO test
Reset
Languange
Save & Exit

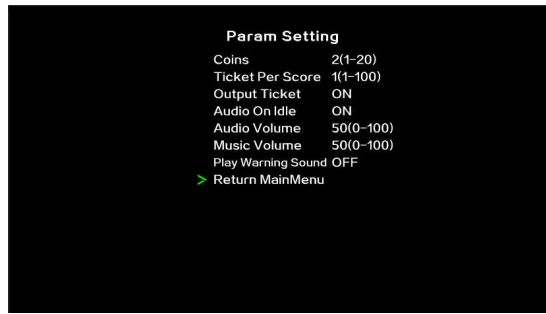


Param Setting			
Item	Instruction	Default value	Setting range
Coins	How many coin need per game	2	1-20
Ticke per score	How many score get 1 ticket	1	1-20
Output Ticket	Ticket out or not	ON	ON/OFF
Audio on Idle	Standby music	ON	<b>ON:</b> Keep playing music during standby <b>OFF:</b> No music playing in standby mode <b>2-60 mins:</b> Play music every 2~60 minutes when in standby mode
Audio Volume	Set the volume of the machine	50	0-100
Music Volume	Set the volume of the background music	50	0-100
Play Warning Sound	Whether to play an alarm sound when a ticket error occurs	OFF	ON/OFF
Return			




Level Setting			
Item	Instruction	Default value	Setting range
Level Duration	Set the height of the climbing body (in screens). The higher the number of screens, the longer the game time.	3	3-10
Select Duration	Select level interface countdown	14	3-30
Bonus Ticket	Ticket of Bonus	1000	0-9000
Game 3 Min Score	Min goal score in level 3	1	1-10
Game 3 Max Score	Max goal score in level	3	10-50

	3		
Game 3 Min Speed	Min speed of the goalkeeper in level 3	2	1-4
Game 3 Max Speed	Max speed of the goalkeeper in level 3	6	4-7
Game 4 Min Speed	Min speed at which the fraction bar can be moved to the left in Level 4	5	5-20
Game 4 Max Speed	Max speed at which the fraction bar can be moved to the left in Level 4	20	20-50
Return			


**Record:**

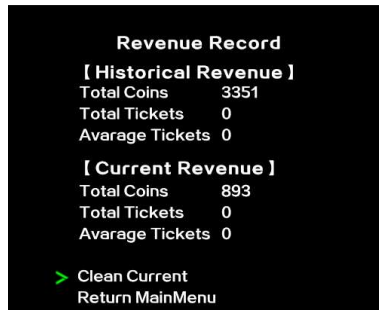

**IO test:**

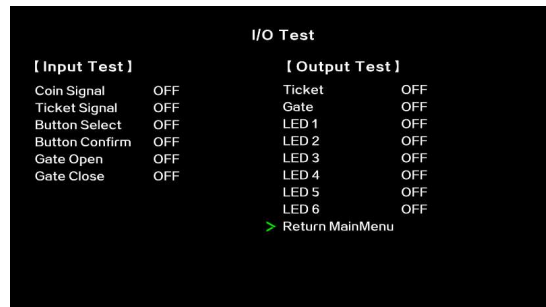

**Game reset:**

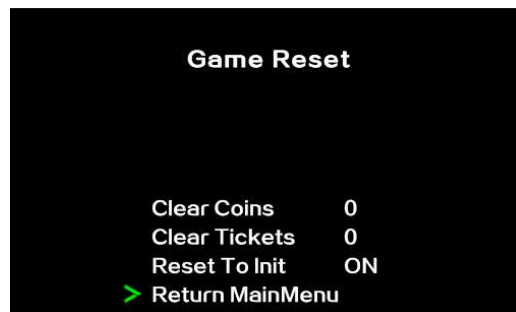

## VII. Installation and Maintenance

### 1 Installation and Commissioning

- Please check the components according to the list to assemble components before installation;
- After installation, plug the cable and turn on the machine to check whether each part runs normally. If no, immediately turn off the machine for troubleshooting.

### 2. Appearance Inspection

To ensure the safe use of the machine, please check the following before startup:

- Whether the warning sign is intact, visible and stuck correctly.
- Whether parameters of power supply are consistent with the requirements of the machine.
- Whether screws of each component and components of the steering wheel are loose.
- Whether the connectors and terminals are loose.
- Whether the machine is placed stably; whether the adjustment of the casters and the top foot are proper.
- Whether the machine is placed in the proper area.

### 3. Running Inspection

- Whether the speaker works normally.
- Whether the daylight lamp and the button light are on.
- Whether the image is clear and normal.

### 4 Maintenance

- Before operation, test run must be done before the machine is used;
- When there is dirt on the machine, wipe it with a soft cotton cloth with detergent;
- After the new machine has been used for one month, check whether each part runs normally;
- Often check the machine;
- The machine must be cleaned and maintained once a month.
- Screen PVC will crack and wear in the use process, please check and clean once in a week.



## **Warning:**

- **Cut off the power supply for maintenance and repair of the machine.**

To prevent short circuit, relevant personnel should cut off the power supply when touching internal components of the machine. If the operation requires power supply, it should meet the requirements of the manual.

- **Use proper parts for replacement.**

Improper parts may cause short circuit, and damage of the main board and the components.

- **Do not disassemble, assemble and change the equipment randomly.**

It may cause short circuit and machine failure, and even fire disaster.

- **Do not place vases, cups and containers with water, chemicals or heavy objects on the machine.**

The spilt liquid may cause short circuit and damage of parts. Meanwhile, falling objects may injure people and damage the machine.

- **Do not place objects in the exhaust outlet of the machine.**

- The blocked exhaust **outlet** may cause temperature rise inside the machine, affect the normal operation of the game, and even damage the parts.

- **Do not repair the machine by yourself.**



## **Jet Games USA**

**ADD: 822 S. Nova Rd. Daytona Beach, FL 32114**

**TEL: 1-855-JET-GAME**

**E-Mail: [INFO@JETGAMESUSA.COM](mailto:INFO@JETGAMESUSA.COM)**

**Web: [WWW.JETGAMESUSA.COM](http://WWW.JETGAMESUSA.COM)**