

Carnival Park **USER MANUAL**




CONTENT

1. General Information -----	3
1.1 Specification -----	3
1.2 Warning-----	4
1.3 Caution-----	4
1.4 Use-----	4
1.5 Maintenance -----	4
2. Shipping list-----	5
3. Machine installation instructions-----	6
4. Parts and Functions -----	10
4.1 How to Move/Lock The Machine-----	11
5. Game Instruction-----	12
6. Background Setting Instruction-----	13
6.1 How To Enter The Background-----	13
6.2 Background Setting-----	13
7. Line module -----	14
7.1 Wiring Diagram-----	16
8. Quick Trouble Shooting-----	17
9. Warranty-----	20

1. Specification

Model	Carnival Park
Reference Code	KA-900
Standby Power	100W
Operating Power	220W
Dimensions (mm)	1760*1760*2250(D*W*H)
Weight (KG)	333KGS
Rated Voltage	AC105V~AC230V
Seats	3
Users Range of Ages	3 years+

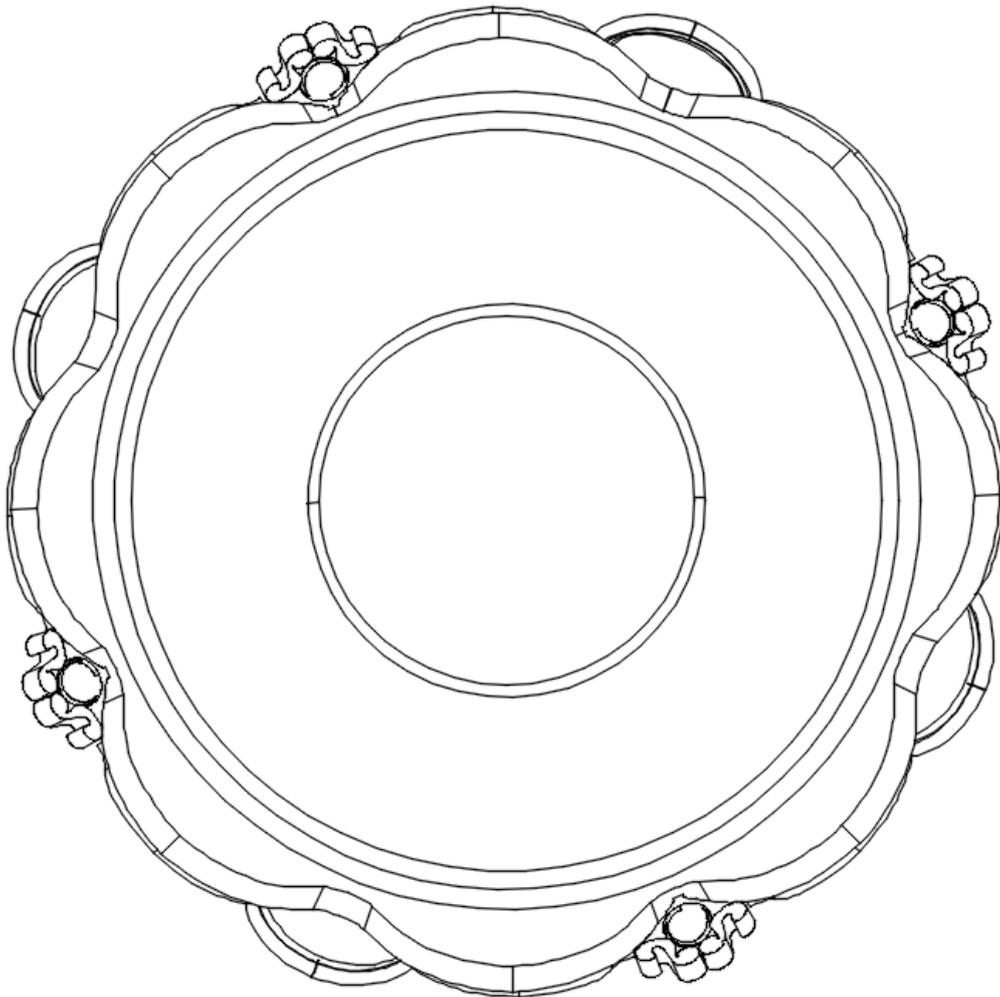

1.2 Warning

- Do not place the machine in which emergency exit is.
- Put the machine in a flat and stable surface.
- Do not bend the power cord by force or place heavy objects on it.
- Never plug or unplug the power cord with wet hands.
- Before inspecting the machine, make sure the power is OFF.
- Always use replacement parts and pieces authorized by supplier for maintenance.

1.3 Caution

- Do not put the power cord where people walk past.
- Use only with a grounded outlet.
- Confirm the work power before use, in case of a short circuit.
- Do not lift the machine by part, Must be always lifted by the base.
- If the power cord is damaged, please power off and contact our staff for replacement.

1.4 Use

- Please make sure child sits well before insert coin.
- Players should not jump or get on /off while machine is in movement.
- Only one player on one seat.
- Do not lean on the machine when in use.
- This machine must be operated under adult's supervision.
- Please cut the power in emergency.

1.5 Maintenance

- Be sure to check and maintain the machine regularly.
- Switch off the power before cleaning or replacing the parts of the game machine.
- Only qualified personnel can inspect or test the electronic board.
- Please use clean and soft cloth to clean the machine.
- Use mild detergent to clean the surface of the machine.

2. Shipping List

Please make sure that you have received the items list as below:

No.	Description	Specification	Picture	QTY	Remark
1	Manual			1	
2	Keys			2	Blue key for coin acceptor, access door and line module. Red key for coin box
3	Power cord			1	

3. Machine installation instructions

3.2 Cover Installation



3.3 Horses Installation




3.1 Pillar Installation




3.1 Step one - Pillar Installation




① The image shows the pillar installation direction, with the motor opposite the access door. During installation, route the three chassis wires through the access door.

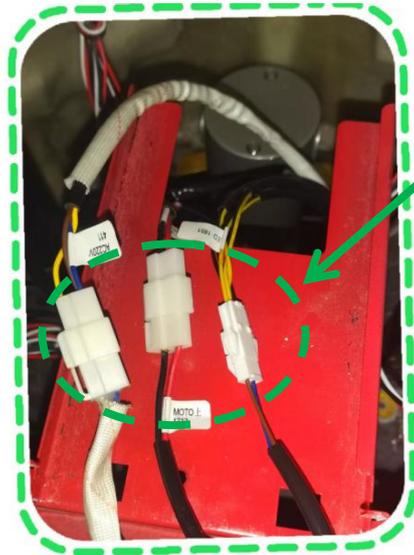

② Insert the wires properly and then tighten the three screws with a 10mm hex key.

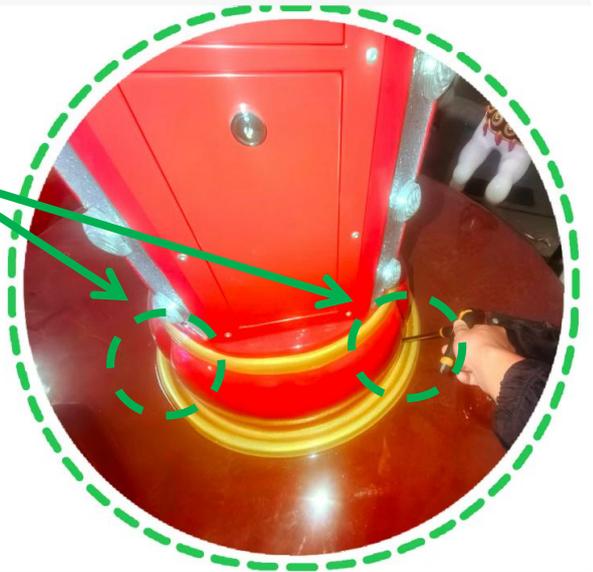


3.2 Step Two - Top Cover Installation

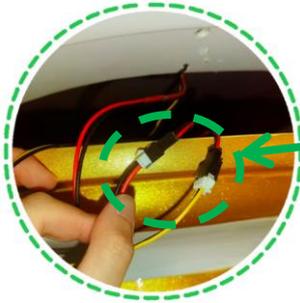

① Install the top cover with the lamp wires connected on the same side, ensuring correct alignment and secure wiring

② Secure the four screws using a 4 mm Allen wrench.

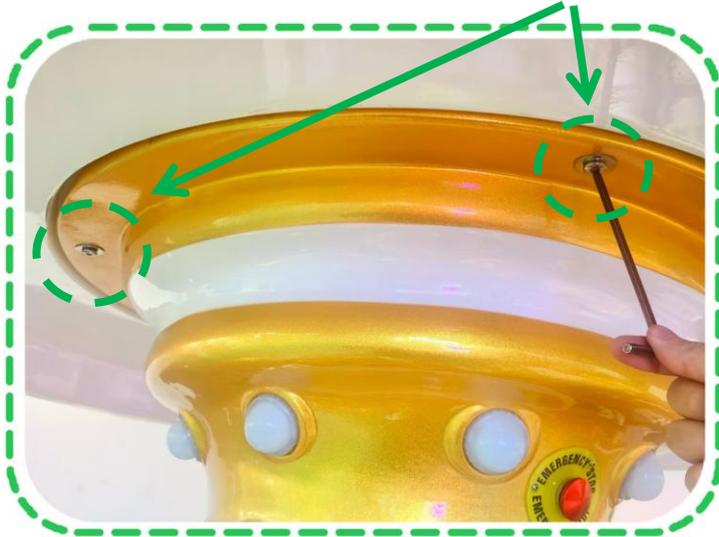

3.3 Step Three - Horses Installation




① Align the holes at the bottom of the horse's body with the shafts of the base frame and secure them in place.



② Tighten the screws with an open-end wrench of model 19. The installation is then complete.

4. Parts and Functions

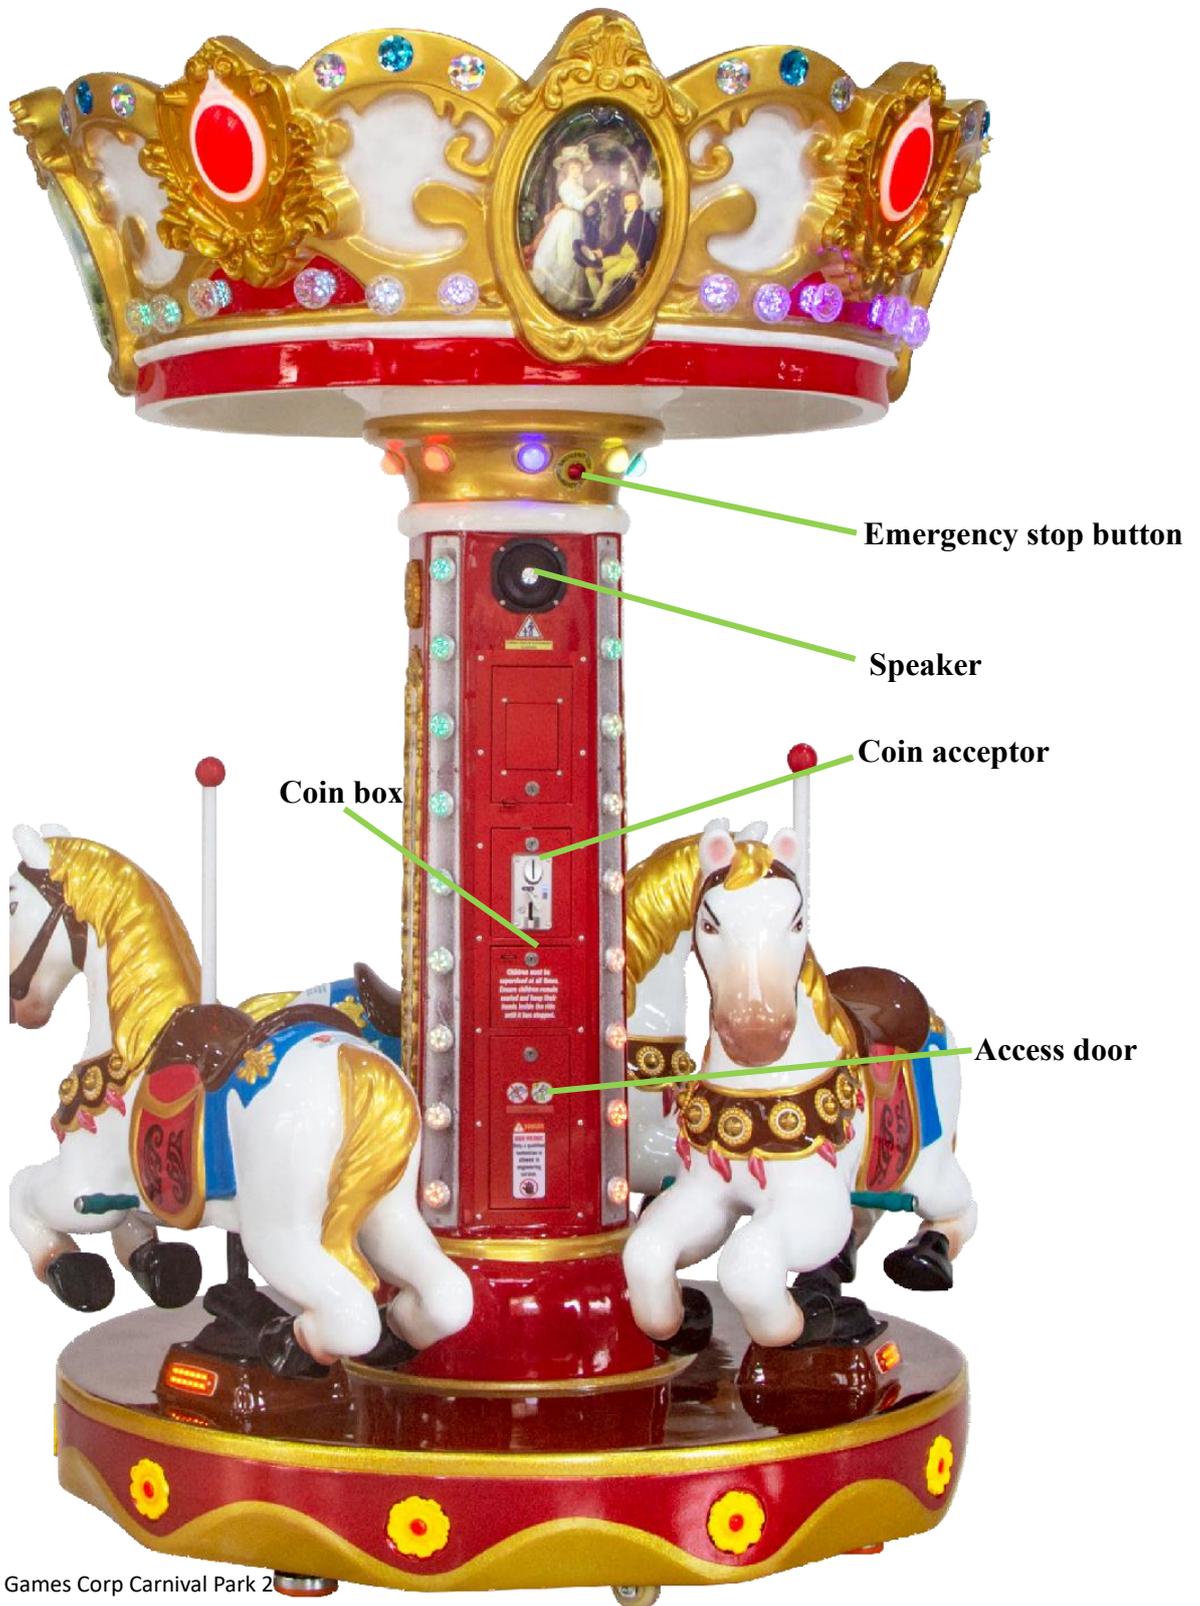

4.1 How to move/lock the machine


The machine must be placed on a horizontal surface. It comes with 4 foot pads and 4 casters.

When moving the machine: Adjust the foot pads to the highest point and keep at least 1cm away from the floor


When lock the machine: please keep all the pads horizontally fixed on the floor.

Operation as follows

- ① When moving the machine, adjust the foot pads to the highest point and keep the casters touch the floor.
- ② The machine can be easily moved while the wheels are load-bearing.

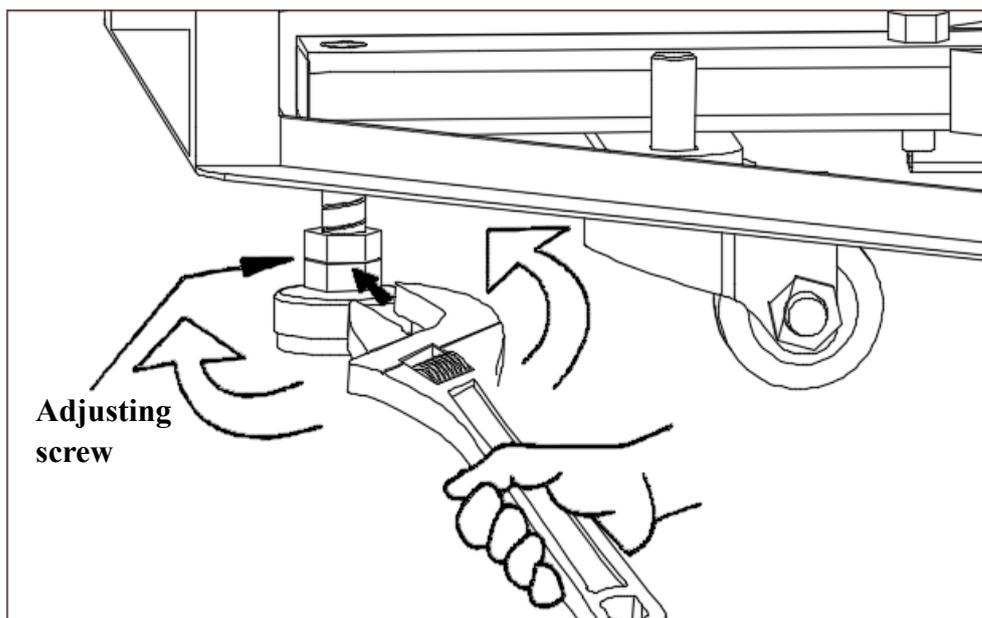

- ③ After confirm the location, tighten screws downward and fix it. Adjust the height of the four foot pads until the machine is in level.

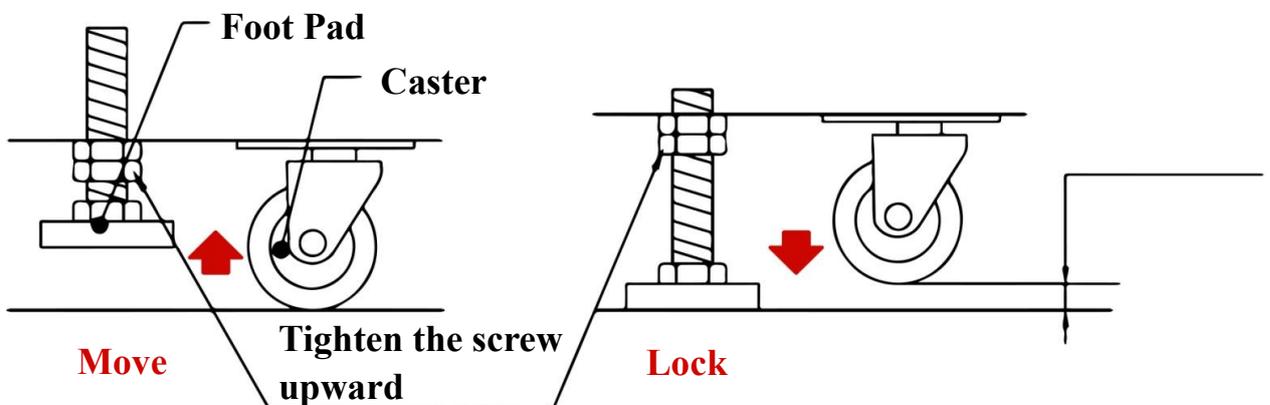

5. Game Instruction

- A three-player musical carousel offers interactive rhythm-based gameplay. Children sit on playful seats and enjoy a synchronized spinning ride guided by melodies.
- Shimmering multicolored lights and enchanting music create a magical atmosphere.
- An emergency stop button, located above the unit, allows parents to pause the ride instantly for safety and peace of mind.

About the Game

1. Choose your favorite pony figure, sit securely, and hold on before inserting the coin. The machine will start after a 3-2-1 countdown.
2. In an emergency, press the emergency stop button immediately to stop the machine.
3. A parent or guardian must supervise during play. Do not allow young children to play unattended.

Game feature

- ☆ Compact and stylish with colorful lights, it features built-in music tracks and can be placed anywhere.
- ☆ Its mechanical structure ensures durability, powered by a safe, low-voltage DC motor.
- ☆ An emergency stop function provides added peace of mind for parents.

How to play

Device	Picture	Function
Emergency stop button		Press the button and the machine will stop rotating immediately.

6. Background Settings

6.1 How to access background settings


Position	Picture	How to operate
 <p>Inside the Coin acceptor door</p>		<p>Select: Navigate up, down, left, and right through settings options.</p> <p>Service: Press to refill coins.</p> <p>Setup: Press and hold for 2 seconds to enter background settings;</p> <p>Confirm: Confirms settings.</p> <p>Exit: Back button.</p>


6.2 Background Settings Description

Main Option	Sub-option	Details	Description
English		CN/EN	Set the language
Basic Setting	Coin qty	1-15coins	Number of coins for 1 game. Default: 2 coins
	Game time	30-540s	Game time setting. Default: 120 s
	Volume	1-9	Set the game volume. Default: 5
	Current protection	ON/OFF	The system will trigger an alarm if the load on a single horse body exceeds 220 kg or the back-drive current exceeds 15 A.
	Coin count	ON/OFF	Whether to retain remaining coins on restart. Default: OFF
	Test		Aging test
	Back		Back to previous menu
Audit			View the coin account
Data Clearance			Clear the accounts.
Restore Factory Settings			Restore the default settings


Version			View the program version number information
Back			Back to previous menu

7. Line module

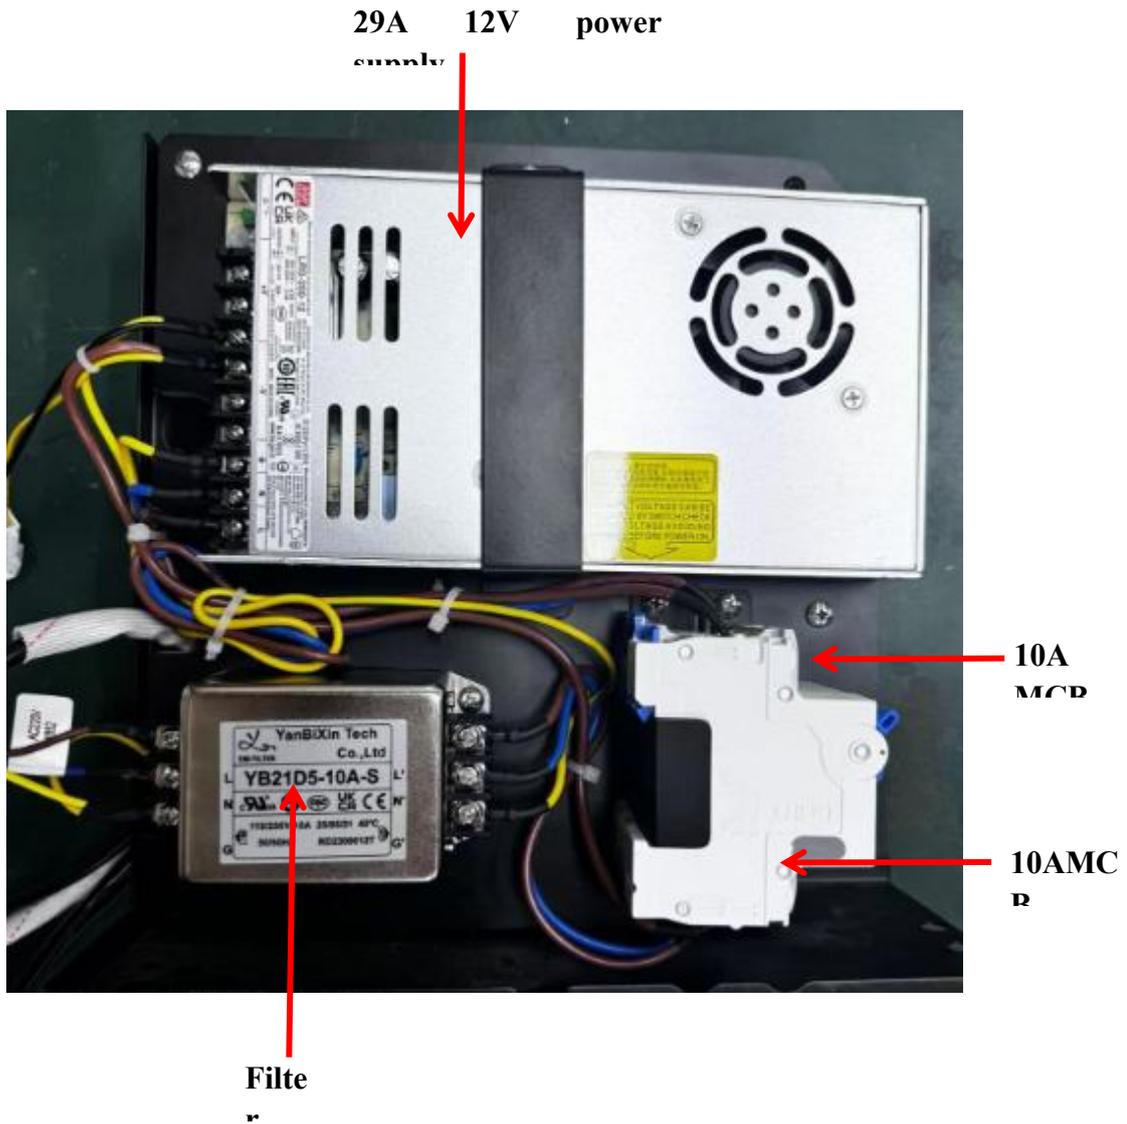

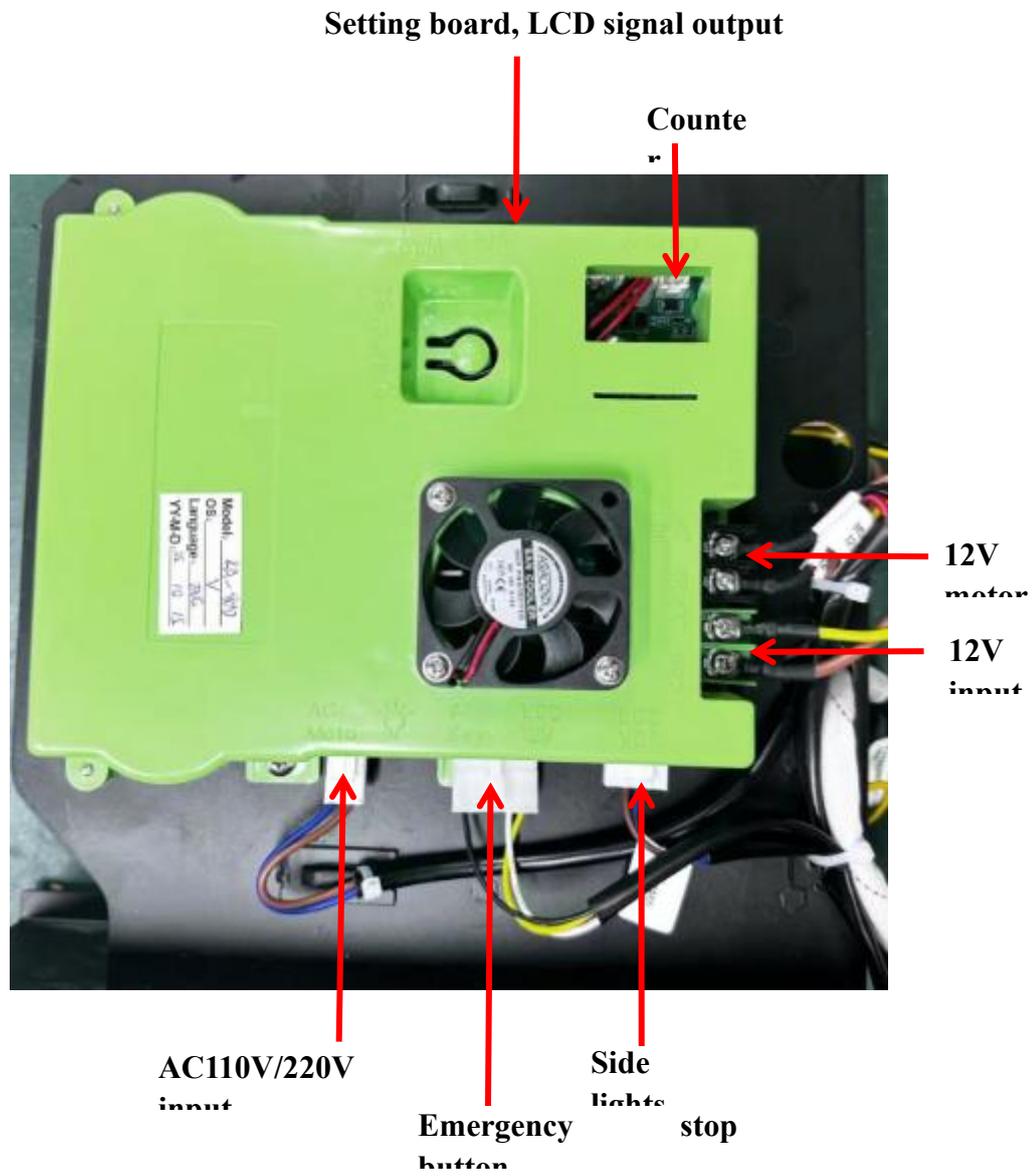


7.1 Wiring Diagram

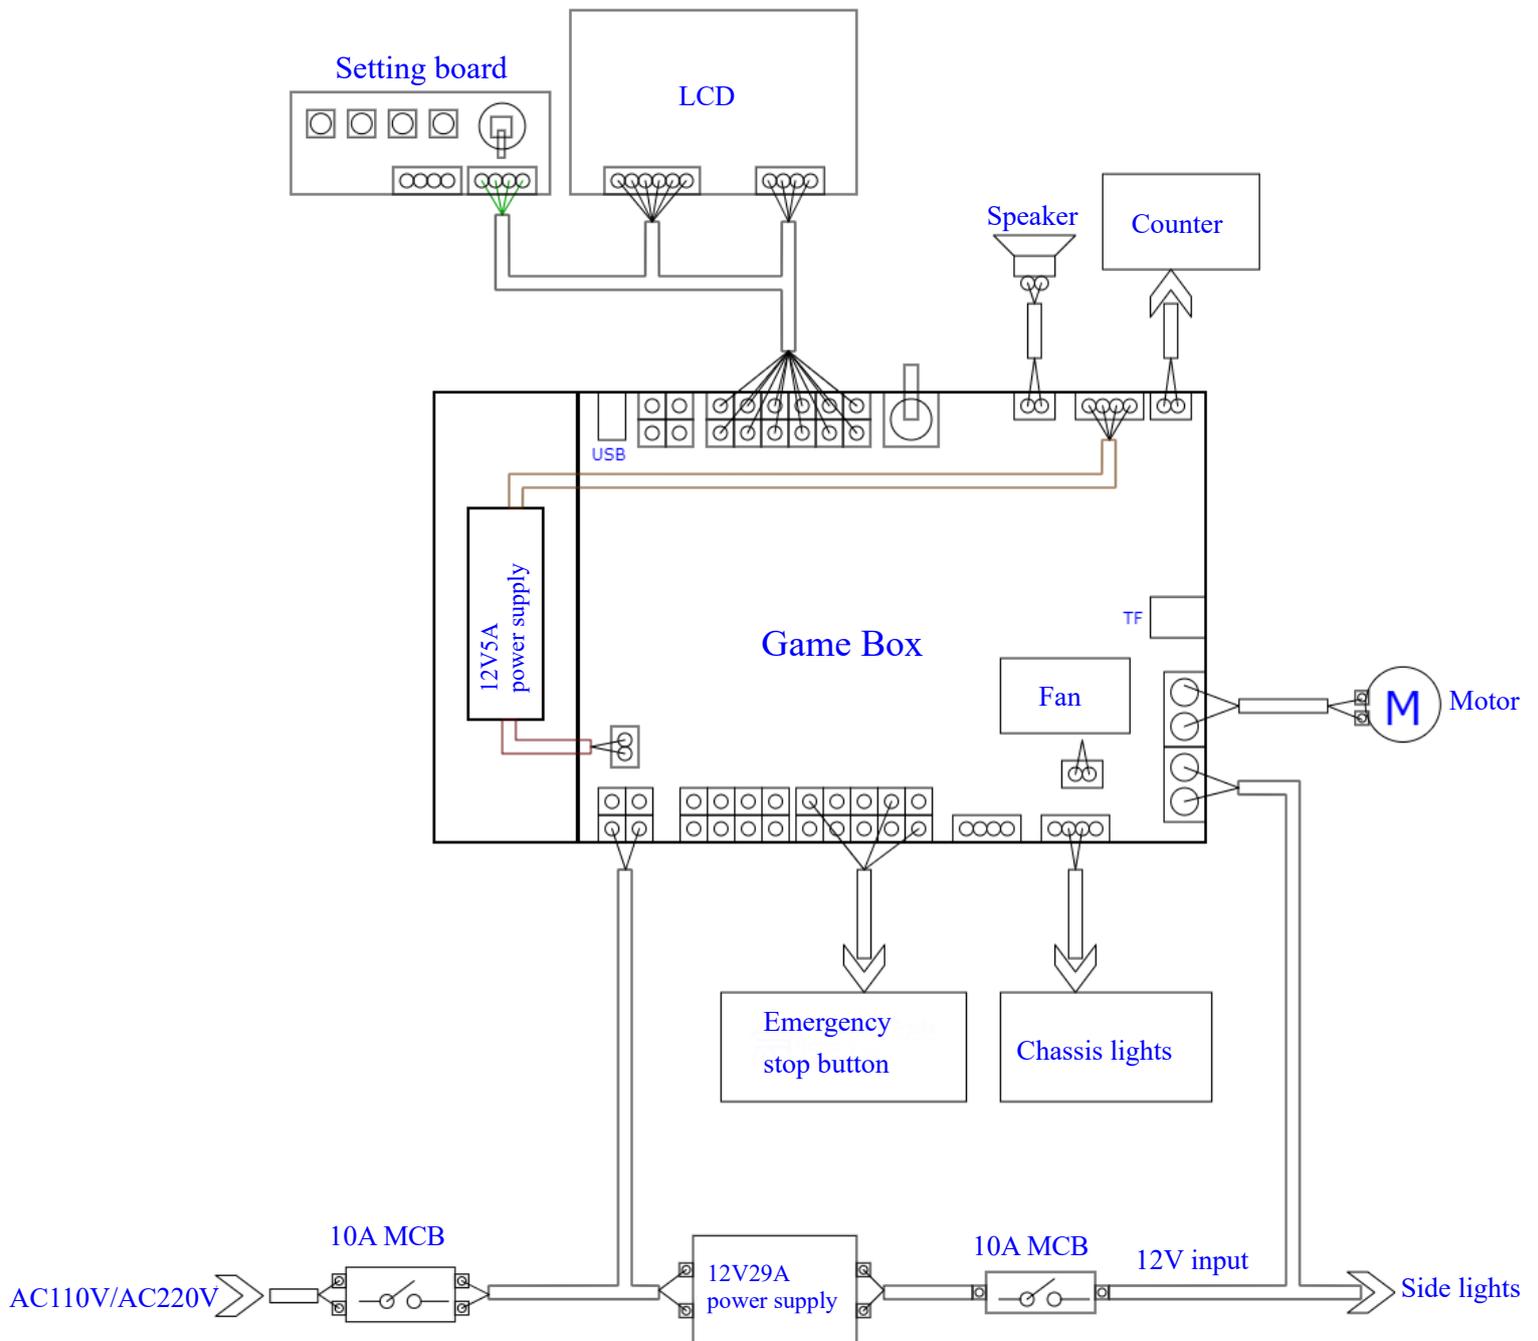

8. Quick Trouble Shooting

8-1 Machine can not boot, no electricity

Please check if the 220V power cable is connected well. (Cable as picture 1)

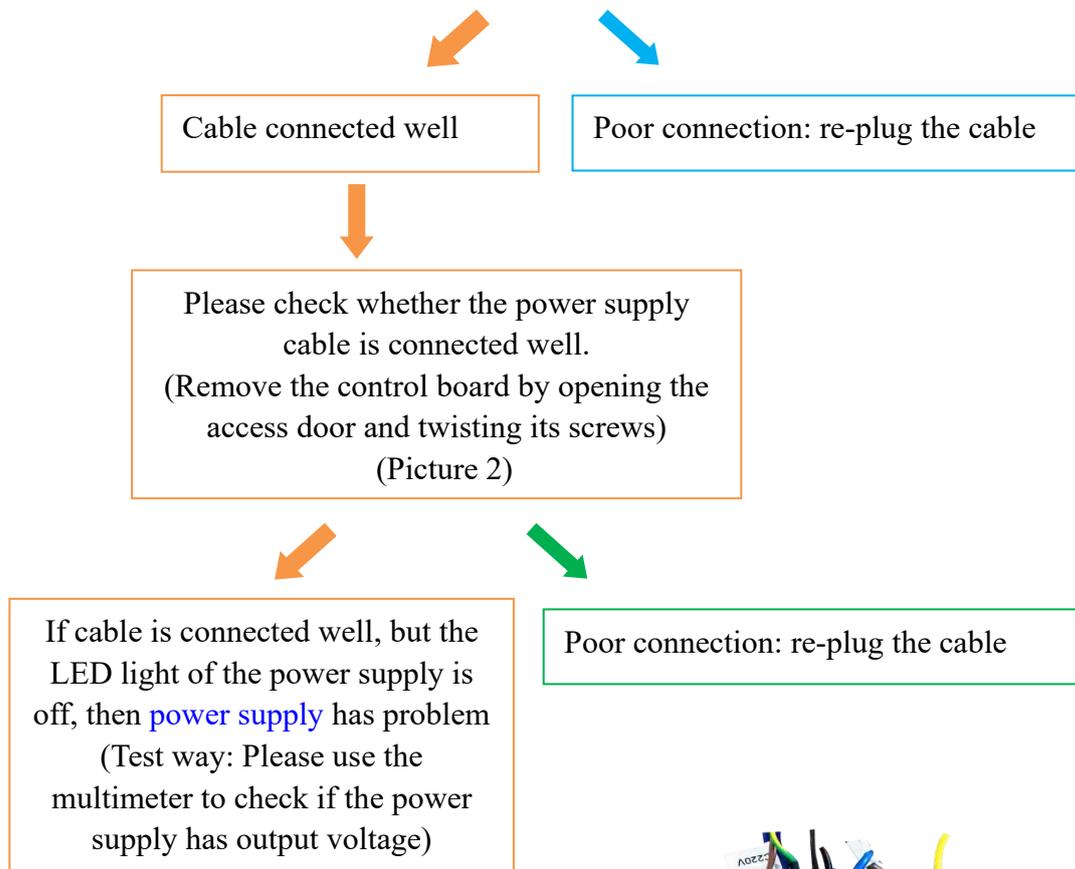



Picture 1: power supply cable
(Visible when the machine is in Side Lay position.)



Picture 2: Power box wiring
(Visible when Open the access door)


8-2 Power on machine, LED light is working, but machine cannot work.

Please check if the game box cable is connected well. (as picture 3)

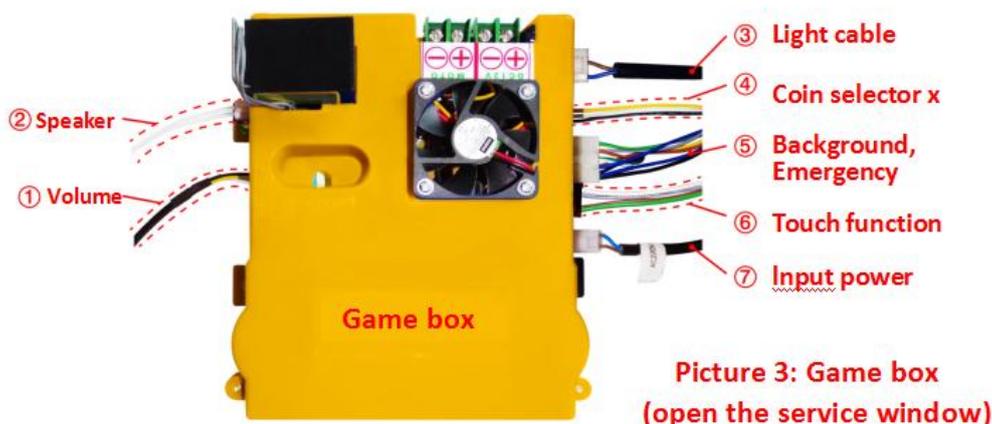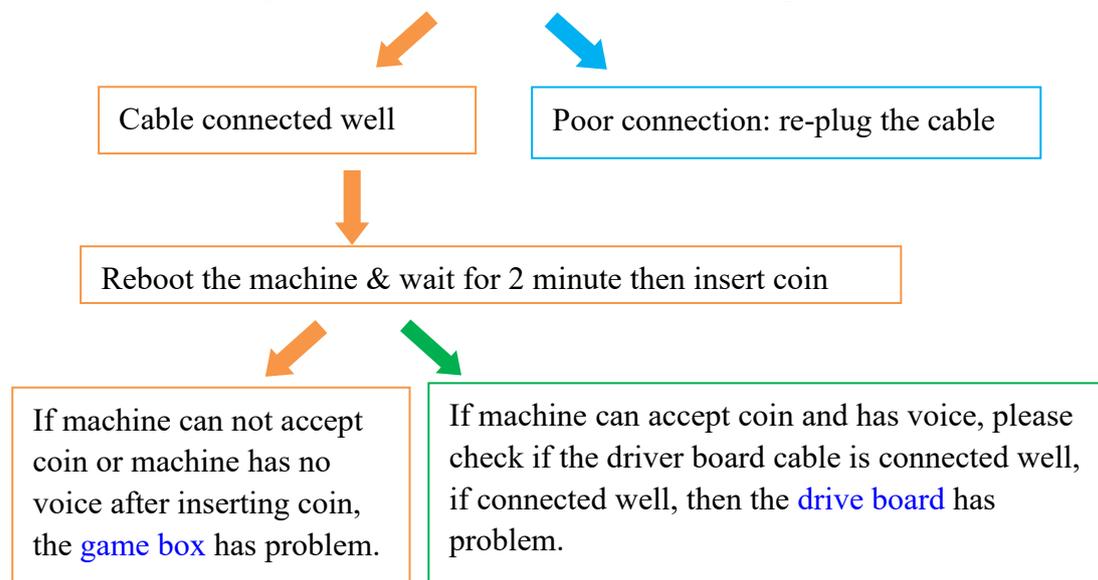


8-3 Machine has no voice during playing

Please check whether the speaker cable was connected well. (②Speaker)

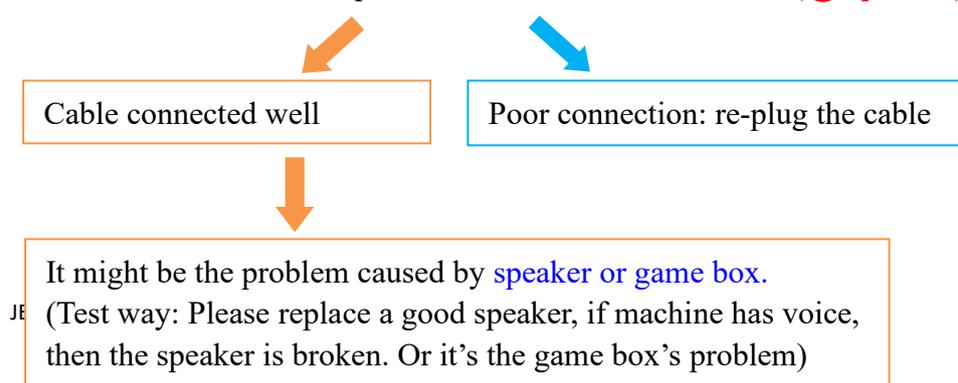

8-4 Coin acceptor can't accept the coin or accept coin but machine doesn't work.

Please check whether the coin acceptor cable is connected well. (④ coin acceptor cable)

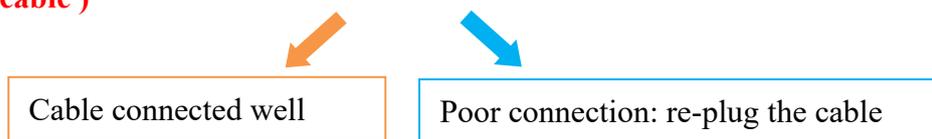

Picture 3: Game box (open the service window)

9. Warranty

Freight cost terms:

- 1) Within 3 months: Warranty parts are maintained by supplier for free, supplier covers the cost of round-trip.
- 2) Within 3-6 months: Warranty parts are maintained by supplier for free, supplier covers the cost of departure transportation, and customer bears the return trip cost.
- 3) Within 6-12 months: Warranty parts are maintained by supplier for free, customer bears round-trip cost.
- 4) Above 12 month: Maintenance fees will be charged according to the status of the parts, customer bears round-trip cost.

*****Spare part list:**

Spare parts	Warranty
Main board/Game box	1 year
Motor	1 year
Motor gearbox	1 year
Power supply	1 year
Main board	1 year
Lamp panel	1 year
Background control board	1 year
Motor control board	1 year
Coin acceptor	3 months
Start button	3 months

***Quality guarantee is not including: man-made damage, abnormal voltage & factors such as irresistible natural disasters**